

Please check contents before assembly. If any items are missing or damaged, **do not take the unit back to the store.** Call 1-800-427-5136 for customer service and we will save you time by correcting any problems directly for you.

PORCH SWING COMPONENTS

Preassembled Swing Back

Preassembled Swing Seat

2 Swing Bars 45" Long

2 Arms 24" Long

2 Arm Supports 12" Long

2 - 21" seat ends already installed on CF1124

NOTE: Cracks or Checks in logs are part of the natural beauty of cedar logs and should not be considered defects.

PORCH SWING HARDWARE

(Shown smaller than actual size)

Two S Hooks

***Six Screws**

Two 3/8" Washers

Four 1/4" x 5" Hex Washer Head Screws

Two 3/8" x 5" Eye Bolts

Two Barrel Nuts

TOOLS REQUIRED

Rubber Mallet or **Block of Wood & hammer**

7/16 Socket

7/16" Wrench or **7/16" Socket**

#2 Phillips Screwdriver

Regular Screwdriver

Tape Measure


Pencil or Marker

NOTE:

- Read all instructions before starting.
- To start hex washer head screws, hammer into wood about 1/2" then use wrench to tighten.
- Do not completely tighten any screws until the unit is fully assembled and setting on a level surface.
- Use a rubber mallet (or a block of wood between the hammer and the unit) to drive doweled ends into holes as far as possible.

For model # CF1123 - 4' Porch Swing: Install seat end onto seat. Line holes in seat end up with dowels on seat as shown in picture right. Repeat on other side. Secure with screws perpendicular to dowel.

* 4 additional screws are supplied with this unit to attach seat ends.

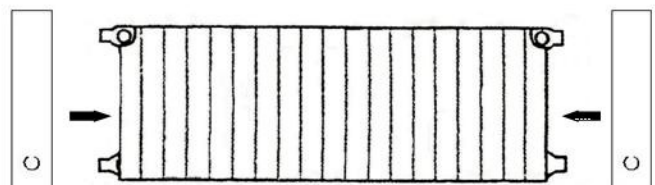

Above is for Model # CF1123 - 4' Porch Swing, continue to other side for CF1124 - 5' Porch swing.