 



## PARTS

Leaf hauler 

Rods (2 short, 1 long) 

- 1 Unfold leaf hauler.
- 2 Expand the rods and the ends will snap together. You will have two short rods and one long rod.
- 3 Place short rods in fabric channels at the sides of the leaf hauler. Each end goes into a fabric pocket. Repeat using the long rod at the back of the leaf hauler. *Please visit [www.ezleafauler.com](http://www.ezleafauler.com) for assembly video if you have any trouble attaching rods.*
- 4 Push anchors into the ground to prevent wind from moving the leaf hauler.

