

Programming Instruction

PAK

1. Open the battery cover, find S, C buttons and a programming switch
2. Press the (S) set button and hear 1 beep
3. On keypad, punch in desired code from 2 digits up to 8 digits, then press the unlock button on keypad to enter this code
4. Engage lock by pressing the lock button on the keypad
5. Test the lock by pressing this code then unlock key
6. Repeat procedure 2 and 3 to program up to 6 different sets of code

To Delete Or Erase A Code

1. Press the (C) cancel button in the battery module
2. Enter the code desired to delete, then press the unlock button, hear 2 confirmation beeps
3. Repeat 1 and 2 to delete other codes

To Erase All Code Previously Programmed

Press the C (cancel button) and hold for 5-10 seconds, then hear 2 confirmation beeps.
This reset the lock

**☀ Lock Function will NOT operate
without any code preprogrammed**

Auto Relock Function

Switch the function button to position (1), the unit auto relock in 10 seconds after every unlock entry.
Switch the function button to position (2)
to deactivate the Auto Lock Function Default setting is at position (2)

