


Wright Products®
Installation Instructions

1. Select the proper length latch which matches your present patio latch length. Mount the selected latch as shown in FIG. 1.
2. Measure your door thickness. The lock supplied will fit doors from 1" to 1-1/4" thick. It may be necessary to shorten the lock spindle with a hack saw or file. See dimensions below.
3. Place the inside assembly into the inside of the door frame. Place the outside plate into the outside of the door frame and fasten together with machine screws provided as shown in FIG. 2.
4. Align keeper to engage latch. If you have difficulty with latching the set you should experiment by using a shorter or longer latch until the desired engagement is achieved.

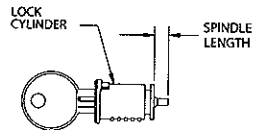

DOOR THICKNESS	SPINDLE LENGTH
1" - 1-1/8"	1/4"
1-1/8" - 1-1/4"	3/8"

